


Basic Functions - App Menu

1 Touch Apps Menu.


From the Home screen,select Apps Menu icon at the bottom to access the application list.



2 Select the application you'd like to open.

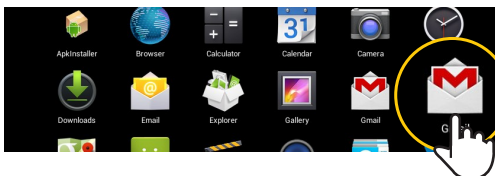

3 Select the Back Key to return to the previous screen. Select the Home Key to return to the Home screen.

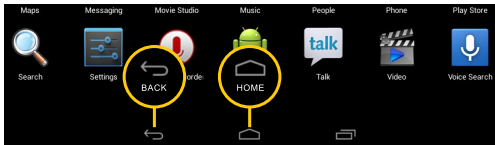


Model:M9703

Personalize Your M9703

1 From the Home screen select "Email."

2 Enter your email address, password and tap "Next."

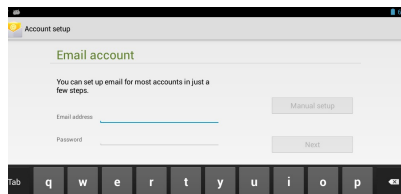


3 Select which type of email account you are setting up and complete settings. (POP3/IMAP/MICROSOFT Exchange Account)

You will need to enter your user name ,password and server information depending on the type of email account , or you can change the settings by tapping "Manual Setup" at the top right corner of the screen. Tap "Next " and select "OK" to accept the activation.

Set up Email

Change Wallpaper

1 Press and hold on a blank spot on the home screen and a menu will show up.

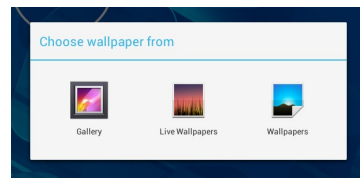


Select from pictures in your gallery or the pre-loaded live and standard wallpapers. Once selected, tap"Set wallpaper."


Model:M9703

Connect Between Tablet & Computer


1 Connect the enclosed Micro USB to USB cable to your tablet and computer.

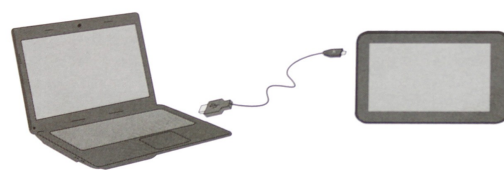

2 Touch "USB"icon on right bottom corner and select "USB connected."

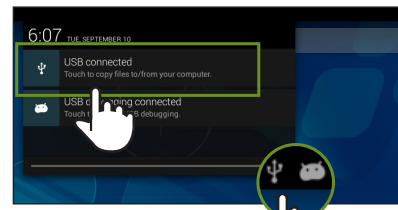


3 Touch "Turn on USB storage".

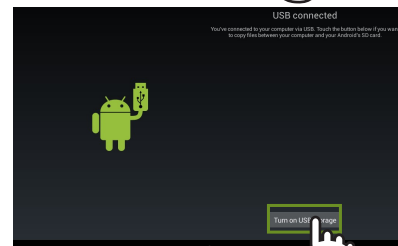


Model:M9703

Connect Between Tablet & Computer

4 Once connected successfully, select "M9703" on your computer to review files in tablet or transfer documents in between.

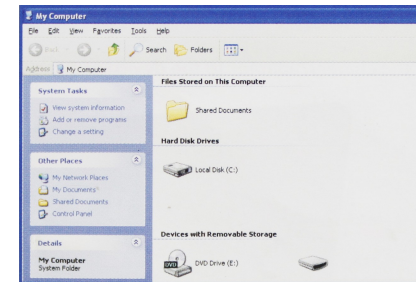

5 Touch "Turn off USB storage" and disconnect cable when it is finished.

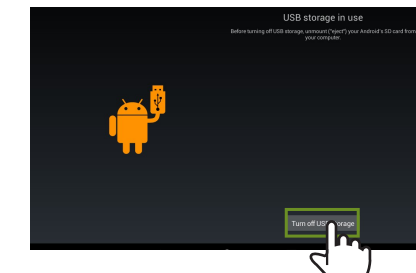

Model:M9703

TRAVELTEK

For a complete & detailed users manual please refer to the following pre-installed APP.




From the Home screen,select User maual icon at the bottom to access the User maual.

Quick Start Guide

M9703

Overview

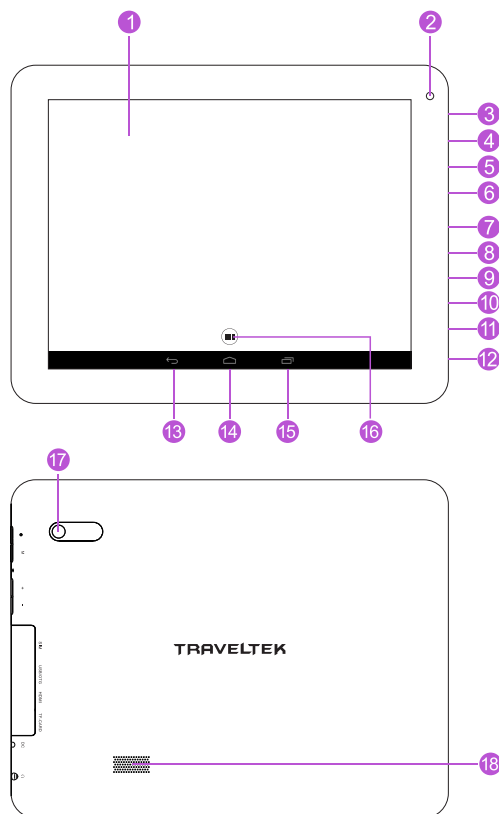

- 1 Touch Screen
- 2 Camera
- 3 Power Key
- 4 Menu Key
- 5 Volume Keys
- 6 Volume Keys
- 7 Micro SIM Port
- 8 Micro USB Port
- 9 Micro MINI Port
- 10 Micro TF Port
- 11 Power DC Input
- 12 Earphone Jack
- 13 Back Key
- 14 Home Key
- 15 History Key
- 16 App Menu
- 17 Camera
- 18 Speaker

Model:M9703

Basic Functions - Charging

Prior to using the M9703 for the first time, fully charge the battery, M9703 has a built-in polymer battery that uses only the designated charger to charge.

In order to prolong the service life of the product, use the device until the battery is depleted for the first two times before charging the battery again.

To charge the battery, connect the charger/adaptor to the device and the DC jack.



NOTE:

- For the first two times of charging the battery, the charger time may be up to 10hours; succeeding times may take up to 5 hours.
- When charger is plugged in after the product shuts down due to low power, it may take a few moments before the product enters the home screen.
- The polymer battery cells in the battery pack are not user-serviceable.

When the device is not in use, be sure to turn it off.

If the device will not be used for a long period of time, be sure to discharge and then recharge the battery once a month.

The built-in polymer battery must be recharged regularly. Battery damage caused by depletion or the use of unauthorized charger is not covered by the warranty.

Model:M9703

Basic Functions - Power On

1 Press the power button to power on.


To power on your M9703 ,press and hold the power button for a few seconds until the Android logo appears.

2 Slide the Unlock icon to awaken screen.



3 Press and hold the Power button for 5 seconds ,then a "Power off" dialog box will pop up.

3 Select "OK" to power off your tablet.

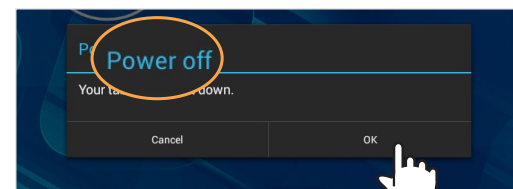

Troubleshooting:


If your M9703 has an error or freezes, you may need to "RESET" your M9703 to regain functionality.

If your device is frozen and unresponsive, press and hold the POWER Key for 10-15 seconds to Power Off.


Model:M9703

Basic Functions - WIFI


1 Select "Settings" on Home screen.

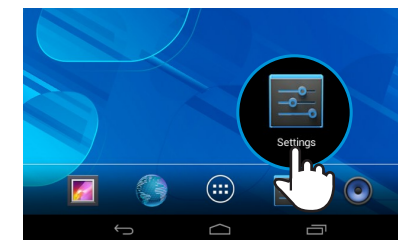

2 Touch Wi-Fi "OFF" to "ON".

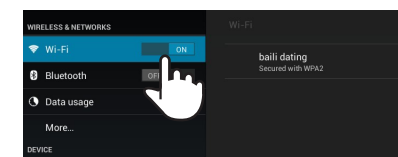

3 Select your designated Wi-Fi connection on list.

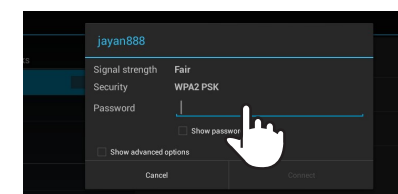

4 Enter the required Wi-Fi password.



5 Once connected, Wi-Fi connectivity icon will be shown at the TOP right corner.

Model:M9703

Precautions

- Avoid dropping or strong collision of the product or heavy vibration of the TFT screen, as it may cause damage or abnormal display of the TFT screen.
- This product cannot be used with any unauthorized charger, otherwise it may burn the product, which is not covered by warranty .For any additional original charger, please contact customer service at 1-800-985-7657.
- To avoid any accidents, please do not use the product when driving or walking on the street.

TRAVELTEK shall not be held liable for any loss of data caused by damage or repair of the product or any other reason. Please operate the product properly following the guidelines.

****NOTE:** Pictures in this Quick Start Guide are for reference only.